
 
## MARSTEK Smart meter reader SMR-W/C

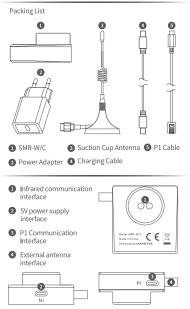

Product Introduction Diagram

- Please confirm your meter manufacturer and model in the app.
- If you use the infrared interface, you only need to plug the power adapter into the IN interface.
- If you need to use infrared communication, please make sure your meter is unlocked.
- Connect the P1 interface to the meter as shown. Do not use the P1 cable for other devices.



## External antenna connection diagram

